




FootfallCam

*Centroid*TM

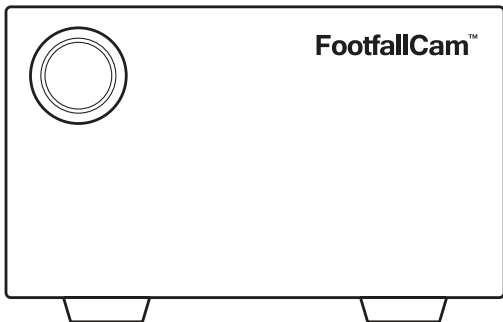

Installation Guide

What Installer Needs to Bring



- 1) RJ45 crimp tool: To terminate Cat5e network cable
- 2) Cat5e network cable: Cable length depends on distance between the router and the Centroid

Part 1: Add Device from Portal

- 1) Access to FootfallCam Analytics Manager V8™: <https://portal.footfallcam.com/Account/Login>.
- 2) Go to Setting > Devices page and click on +New Device button to access Add Device page.
- 3) Add devices by entering all the required fields and click on Add button.

**Kindly refer to the FootfallCam Setting up Devices Guide (Chapter 4.1.2 Manually Add Device from Portal) for more details.

Part 2: Wiring Setup Installation

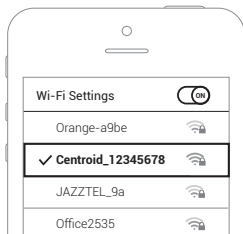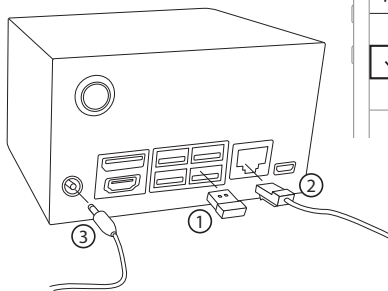

1) INSERT DONGLE

Insert the attached Wi-Fi dongle into any one of USB 3.0 ports.

2) CONNECT TO CENTROID

Run a Cat5e network cable from router to the Centroid.


3) POWER ON

Connect the attached power supply adapter to the power jack. The Centroid will power on and boot up automatically.

4) LED LIGHT INDICATION

A blue LED on the button will light up as soon as the Centroid powers on.

Part 3: Configuring the Centroid

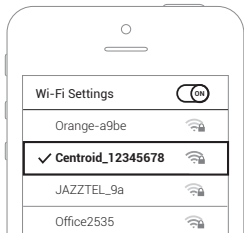

① LOGIN TO THE CENTROID SETUP WIZARD

Go to the list of available Wi-Fi networks on your mobile device, select the Centroid SSID e.g. Centroid_12345678 and connect with the password pillow7788.

Type <http://192.168.4.1> in the browser and login with the password clock1010.



② CONFIGURE THE CENTROID

Input the following details:

Centroid Name - Naming the Centroid

IT Details [Optional] - Fill in the information needed:

Server Address, IP Setting, Proxy Setting, etc.

**A blue dot next to the "Connection Status" indicates that the the Centroid is online and connected to the server.



③ COUNTER / CCTV BINDINGS

Go to Connections tab and add the IP address of the counter / CCTV for bindings.

Make sure the status is Active. If not, please check that:

i - Counter / CCTV is online

ii - Make sure the counter / CCTV is using the same network as the Centroid.

FOR MORE INFORMATION, PLEASE REFER TO:



Datasheet For
FootfallCam Centroid



FootfallCam Setting up
Devices Guide